

The board front lever is provided with a built-in microswitch, which is used to disable the on-board power circuit when released, and vice versa to enable the on-board devices when locked. Please refer to the illustration below and make sure that the position 8 has been achieved for proper board operation. A gentle click should be audible, when the red actuator pin moves into its raised position, indicating that the board is locked and ready for use.

